

## DX-80 DX-120 SYSTEM SPEED DIAL

**Programming Note:** [back], [next], [show], [chg], [bksp] and [save] are LCD interactive button operations. Use the three buttons below the LCD display to actuate the associated operation.

PRESS      **Feature # \***              **(pound,star)**

PRESS      **#####**                      **(pound sign 8 times)**

PRESS      **[SHOW]**

INPUT      **0 4 – 0 9 – 1**

PRESS      **[SAVE]**

\*\*Input the speed dial location to program **(500-699)**

PRESS      **[SHOW]**                      The current stored number displays

PRESS      **[CHG]**                          to change this stored number

Input the new telephone number

PRESS      **[SAVE]**                          The speed dial number and the new contents are displayed

PRESS      **[NEXT]**                          and input the next speed dial location to add or Change (see instructions starting from \*\*)

Once all numbers are completed, press **ON/OFF** or **SPKR** key twice to end programming